

How to Reset Barcode Scanner

















Inateck BCST-60 Scanner

There are times when the Inateck BCST-60 Scanner will not read and communicate the barcode value to the computer. Usually it just takes a few steps to reset it to the Factory Defaults to get it working again.

In the Inateck User Guide on **Page 4** are a series of Barcode Codes that you can use to reset the scanner.

Frequently Used Barcodes

**1) Click on
"Enter Setup"**

 Enter Setup	 Exit with Save
 Exit without Save	 Restore Factory Setting
 (* Apply Enter for Suffix	 Do Not Apply Enter for Suffix
 (* Enable Auto Laser-darkening Mode	 Enable Manual Scanning Mode
 Enable Continuous Scanning Mode	 Enable Auto Induction Mode
 (* Enable Auto-sleep Mode	 Disable Auto-sleep Mode
 2.4G Paring	 Lower case for all letters
 Upper case for all letters	 (* Keep original case
 Mute	 Minimum Volume
 (* Medium Volume	 Maximum Volume

**2) Click on
"Restore Factory
Setting"**

To Reset:

- 1) Use the scanner to click on "Enter Setup" code
- 2) Use the scanner to click on the "Restore Factory Setting" code
- 3) Test the scanner by scanning a barcode